

Digital Refrigerator Thermometer



Model No.: E344

Item Number. 5-600

First we want to thank you for purchasing the Digital Refrigerator Thermometer from Sunartis. Using the Digital Refrigerator Thermometer, you can precisely keep track of the temperature in your refrigerator and keep your food safe and fresh. The perfect temperature of refrigerators maintains between 4°~8° Celsius. This temperature is influenced by the amount off load and the surrounding temperature and needs to be adjusted regularly. The Digital Refrigerator Thermometer shows the actual temperature inside the refrigerator. An additional ice ❄️ symbol appears next to the degree figure when the temperature is in the perfect range. Regulate your refrigerator from time to time to ensure the temperature stays in the perfect temperature range. Regulating your refrigerator can help you save electricity and extend the storage life of your food. Keep it cool, keep it fresh, keep it safe.

Discription

1. Wide temperature range from 0°~50°C/(32°~122°F)
2. Safe temperature zone indicator
3. Hanger and stand
4. Selectable °C/°F (button is located at the back)
5. Digital LC-Display
6. Battery type CR2032 3V included

Please read this manual before the first use

Use and care

1. Clean the thermometer with a damp cloth before use. Do not use harsh detergents or abrasive cleaners.
2. Press the "**ON/OFF**" button at the back to turn on the unit. The LCD shows the current ambient temperature.
3. Place or hang the thermometer inside the refrigerator (refer Fig.2). Face the dial out of refrigerator that it can be read easily.
4. Wait a few minutes (with closed doors) until the actual temperature on the inside is regained.
5. The temperature of refrigerator should maintain between **4°~8°C** (39-46°F). Regulate your refrigerator in small steps, until you are in this temperature range. Close the refrigerator in between for several minutes to ensure a constant temperature. How to regulate the refrigerator refer to the manual of the unit.
6. An ❄️ icon shows on LCD when refrigerator temperature is between 4°C and 8°C (39-46°F).

7. Power off the unit by press the “**ON/OFF**” button for energy saving when the product is not being used.

CAUTION!

1. Do NOT use the thermometer over the operating temperature range.
2. Do NOT subject the unit to extreme temperature change.
3. Do NOT place in dishwasher.
4. Do NOT hold under running water.
5. Do NOT put into water.
6. Do NOT use in freezer.

Replacing Battery

For changing the battery please place the unit, display down, on a smooth surface.

1. Open the battery case on the bottom of the unit. Refer Fig.1.
2. Replace the empty battery with a new battery of the same type.
3. Place the new battery with the ‘+’ symbol upside (toward back of the unit) back in.
4. Switch the unit on by pressing the “**ON/OFF**” button on the back.

Fig. 1: Battery Replacement


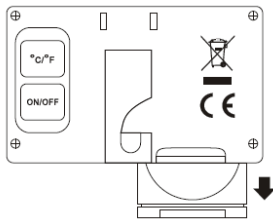


Fig. 2: Change between Hanger and stand

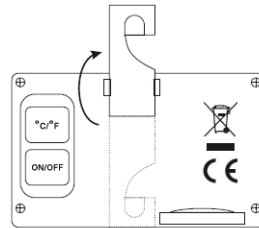

In case you have any further questions on this unit, please feel free to contact us under the given details during the public office hours.

REMARKS

Battery Law:

Please take note, that this unit contains a battery. Batteries and accumulators must not be disposed of as unsorted municipal waste. Users of batteries and accumulators must use the available collection framework for the return, recycling and treatment of batteries and accumulators. Please take care of our environment and dispose your batteries accordingly. Thank you for your assistance.

Disposal:

This product contains valuable parts that can be recycled to reduce the impact on the environment. Please use public municipal assembly for disposal.

Packaging:

Packaging materials can be recycled. Please dispose in an environmental safe way.



Virmondstr. 143 D-47877 Willich

Tel.: +49(0) 2156 496850 - Fax: +49(0) 2156 496811

www.mingle-europe.de - email: info@mingle-europe.de